



2 Channel Instrument Preamp / EQ / Blender  
Owner's Manual Rev. A

GRACE  
DESIGN

Grace Design, 4689 Ute Highway, Lyons, CO 80503  
303.823.8100 / info@gracedesign.com  
www.gracedesign.com



# 1 Welcome

If you're reading this, you are probably a working musician or audio professional of some kind. You've spent years honing your craft with long, lonely hours spent strumming, picking, tweaking, bowing, thumping and plucking. Maybe you tour the world, or just the local coffeshops. You've gotten up on stage tired, given more than you thought you had and driven home barely awake but your soul still singing. You have friends and bandmates out there that you rely on like family. Some of your friends, maybe the very best ones, are made of wood, steel, glue, bone and strings. And now you can welcome Felix to the latter category.

Regardless of where you end up playing, from here on when

## TABLE OF CONTENTS

1	Welcome.....	2	9.1	Where to put Felix?.....	7
2	Safety Information.....	2	9.2	Using the XLR mic input Ch1.....	7
3	Safety Marking Symbols.....	3	9.3	Instrument / line inputs.....	7
4	Features.....	3	9.4	Filtering and EQ.....	8
5	Top Panel Controls and Features.....	4	9.5	Output controls.....	9
6	Back Panel Controls and Features.....	5	9.6	Footswitch Controls.....	10
7	Side Panel Controls and Features.....	5	9.7	Side Panel Controls.....	10
8	Connecting Felix to Stuff.....	6	10	Diagrams.....	11
8.1	1/4" Instrument inputs, Ch1 and Ch2.....	6	10.1	Insert cable Wiring.....	11
8.2	Ch1 XLR mic input.....	6	10.2	External Footswitch Wiring.....	11
8.3	Insert.....	6	10.3	Adjusting Internal Jumpers.....	12
8.4	Amp Out.....	6	10.4	Internal Jumper Locations.....	13
8.5	Tuner Output.....	6	10.5	Block Diagram.....	14
8.6	FS - footswitch Input.....	6	10.6	Connection Diagram.....	15
8.7	DI Outputs, Ch1 & Ch2.....	6	11	Specifications.....	16
8.8	Headphone Output.....	6	12	Cleaning and Maintenance.....	17
8.9	100-240VAC Power Input.....	7	13	Warranty.....	17
9	Operation.....	7	14	Manual Revisions.....	18

you look down at that stage floor, he'll be down there shining back up at you, making you sound better and your job easier.

While Felix is not the most complicated piece of gear you've ever operated, he does come with a great deal of flexibility and setup options, which means we highly recommend you have a good look at this owner's manual to familiarize yourself with his finer points. Once you overcome the learning curve (easy, we promise), you'll find Felix to be intuitive, powerful and really quite user friendly.

Most of all, we made Felix so you can make great music. So read this manual and then get back to work!

# 2 Safety Information

- Indoor use only
- Ordinary Protection: This equipment should not be exposed to dripping or splashing.
- Avoid placing objects filled with liquids, such as vases or glasses, on this equipment.
- Class I Equipment (grounded type)
- Electrical rating: 100-240V~ 50-60Hz 10W
- Mains supply voltage fluctuations are not to exceed  $\pm 10\%$  of the nominal supply voltage.
- Pollution Degree 2
- Installation (Over voltage) Category II for transient overvoltages.
- Maximum Relative Humidity: <80%
- Operation temperature range: 10 °C to 40 °C
- Storage and transportation temperature range -40 °C to 70 °C
- Maximum altitude: 3000m (9843 ft)
- Equipment suitable for continuous operation
- Weight: 3.2lbs

# 3 Safety Marking Symbols

---

## Caution: Read Accompanying Documents



This symbol, located on the equipment and in this manual, refers to important instructions. Read this manual thoroughly before operating this equipment.

## Warning: Electrical Shock Hazard



This symbol, located on the equipment and in this manual, indicates the potential for electrical shock hazard.

## Service Information

The Grace Design Felix contains no user serviceable components. Contact Grace Design for repair and upgrade information. In the event that your Grace Design m920 needs to be returned to the factory, contact us for a return authorization number.


# 4 Features

---

- Open, musical and detailed instrument and mic preamplification for discerning artists and engineers like yourself
- 2 channel audio path with blend output control
- m101 style transimpedance microphone preamplifier, no electrolytic capacitors in the signal path
- Ultra precision 0.5% thin film resistors used in the signal path
- Careful power supply design and grounding for an ultra-quiet signal path and professional level headroom and line driving ability
- Dual, fully ground isolated DI outputs with high quality, low distortion, fully shielded transformers
- Super rugged 1/4" connectors with heavy duty metal bushings
- Powerful, independent EQ on both channels – hi and low shelving and full parametric midrange
- Mid frequency control has two ranges 70-880Hz / 6670 - 8kHz
- 20Hz-1kHz sweepable HPF on both channels, can also be set as notch filter
- A / B footswitch for multiple instrument configurations or soloing different pickups
- Mute/ tune footswitch mutes all outputs except dedicated tuner out and headphone output
- Boost footswitch for variable 10dB level boost (global)
- DI outputs sources are configurable - Ch1 (mix or Ch1) Ch2 (mix or Ch2)
- Dedicated level controlled stage amp output (configurable as MIX or Ch2)
- Dedicated tuner out, remains active when unit is muted
- 1/8" headphone jack, remains active when is muted
- Side panel switches for 48V, phase, mid Hz range select, HPF/notch select, 12V and A/B mode select
- 12V mic input power available on Ch1 and Ch2 1/4" inputs
- Phase reverse switch for each channel
- 3 input impedance settings on each channel – Ch1 10K, 1MEG, 10MEG / Ch2 332K, 1MEG, 20MEG accommodating a wide range of pickup types
- Aux footswitch jack for accessing switch functions if Felix is mounted in a rack tray or on top of an amp
- Mic stand flange mount screw holes for putting Felix on a mic stand
- Global TRS effects insert jack
- Universal 100-240 AC power supply with standard IEC cable – no wall wart - take Felix anywhere in the world!
- Full 5 year transferable warranty / built for a long, happy life on the road
- Designed and made by us in Lyons, CO, USA




## 6 Back Panel Controls and Features

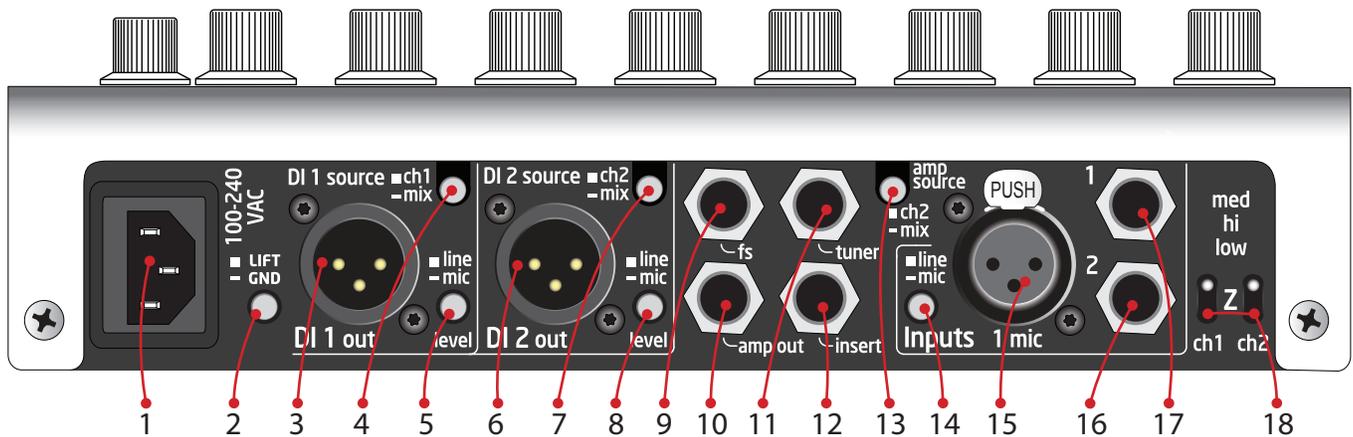

1. Universal 100-240VAC power supply input module
2. Ground lift switch
3. Ch1 DI output
4. Ch1 DI output source select
5. Ch1 DI output line / mic level select
6. Ch2 DI output
7. Ch2 DI output source select
8. Ch2 DI output line / mic level select
9. External Footswitch input
10. Amp Output
11. Tuner Output
12. Effects Insert
13. Amp Source Select switch
14. Ch1 input mic / line switch
15. Ch1 mic input
16. Ch2 line input
17. Ch1 line input
18. Ch1 & 2 input impedance select

## 7 Side Panel Controls and Features

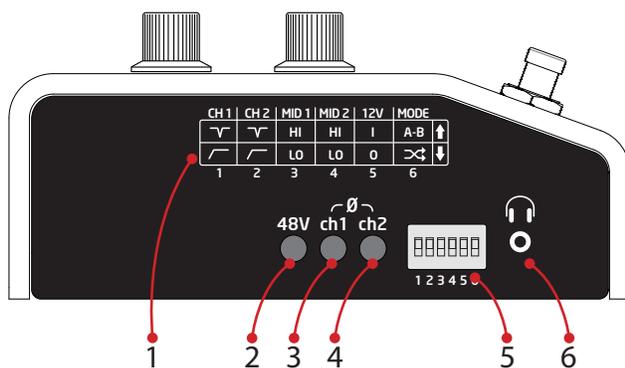

1. Dip Switch location diagram
2. Ch1 48V phantom power
3. Ch1 phase reverse
4. Ch2 phase reverse
5. DIP switch controls
6. 1/8 mini headphone jack

# 8 Connecting Felix to Stuff

## 8.1 1/4" INSTRUMENT INPUTS, CH1 & CH2

**INPUT 1** - This input is for connecting any instrument pickup, electret mic or line source to Ch1. The connector is a standard unbalanced 1/4" jack wired tip signal, sleeve ground. If you are using this input, remember to select the 'line' setting of the adjacent 'mic/line' switch. We recommend muting Felix before changing the setting of the mic/line switch to avoid pops on the output.

**INPUT 2** - This input is for connecting any instrument pickup, electret mic, or line source to Ch2. This input can also accommodate two different signals from a dual source pickup system on one TRS 1/4" cable. The connector is a standard TRS 1/4" jack wired tip signal to Ch2, ring signal normaled to Ch1, and sleeve ground. If you are using this input, remember to select the 'line' setting of the adjacent 'mic/line' switch.

Both Ch1 and Ch2 line inputs have 3 input impedance settings, selectable from the toggle switch labeled 'Z'. The settings are:

Ch1: med - 1MΩ / hi -10MΩ / low – 10kΩ

Ch2: med - 1MΩ / hi -10MΩ / low – 332kΩ

Some pickups or sources are more sensitive to preamp input impedances than others. For example, if you use a 'Sunrise' magnetic pickup, they prefer to connect with an input impedance of 1MΩ. If you have an onboard preamp or a lower impedance pickup, the input impedance setting will probably make less of a difference. In any case, we encourage you to try different settings with your pickup or source. The difference may be noticeable or not, and should be set accordingly to what sounds best to you. Always what sounds best to you!

## 8.2 CH1 XLR MIC INPUT

This input can accommodate any type of microphone, from a SM57 to a large diaphragm condenser, even a ribbon mic. The connector is wired pin 2 positive, pin 3 negative and pin 3 ground. 48V phantom power, if activated, is supplied on pins 2 and 3. If you are using this input, remember to select the 'mic' setting of the adjacent 'mic/line' switch. The side panel phantom power switch should always be set to OFF whenever connecting or disconnecting this input. We recommend muting Felix before changing the setting of the mic/line and 48V switches to avoid pops on the output.

## 8.3 INSERT

The insert connection is a buffered, unbalanced insert point on the blended signal (post boost) for connecting outboard effects to Felix. This allows outboard signal processing to be placed in series with the blend signal, while still utilizing all of Felix's output capabilities. It is a 1/4" TRS connection, wired tip to send, ring to return and sleeve to ground.

**SEE WIRING DIAGRAM page 11**

## 8.4 AMP OUT

This output is for sending an unbalanced, non-transformer

isolated output to a stage amp or anywhere else you may need an additional unbalanced signal. This output has the added benefit of a level control, which is situated on the right side, bottom row of controls on the top panel. This output is muted when the MUTE / tune footswitch is activated.

Amp out can be sourced from either the blended signal or Ch2 alone, with the selection being made with the 'amp source' selector switch on the rearpanel.

## 8.5 TUNER OUTPUT

This is another unbalanced output which is always active – provided as a dedicated stage tuner out. When the MUTE is activated, your stage tuner will continue to receive signal, allowing you to tune silently. The Tuner output level follows the Amp Out level control.

## 8.6 FS - FOOTSWITCH INPUT

This input is for connecting an external footswitch to operate the top panel footswitch functions. This is provided for folks who will keep their Felix in a rack, on top of an amp, mounted to a mic stand, or anywhere up off the floor. This allows you to connect a standard 2 way foot switch and access the MUTE and BOOST / TOGGLE functions. These controls have a logic 'or' function, so if either the footswitch or the front panel toggle is engaged, the associated function will be activated. Felix utilizes and requires 'normally open momentary' type footswitches.

**SEE WIRING DIAGRAM page 11**

## 8.7 DI OUTPUTS, CH1 & CH2

These two outputs are balanced and transformer isolated, for sending Felix signals to a front of house or monitor console, or any mixer or interface where balanced, isolated signal needs to be sent. XLR pinout is: PIN 2 positive, PIN 3 negative and PIN 1 ground.

Each output can be sourced from either its individual channel only, or the blend of the two channels, adjusted by the 'MIX' control on the far right of the top panel controls. Source select is via the 'DI source select' switch above each XLR output. Also, each output has an adjacent level setting switch – line and mic, depending on what input this source will be feeding. In the 'mic' setting, the output is padded down -26dB to interface properly with mic inputs at the console, the 'line' setting is not padded for better level matching with line level inputs at the console or interface.

## 8.8 HEADPHONE OUTPUT

This is a 1/8" mini style headphone jack for monitoring Felix via your headphones, EIM, earbuds etc.. This output level is the same as the amp out, so the top panel amp out level control is used to adjust headphone volume as well. This output remains active when Felix is muted, so you can plug in your IEM's and practice privately during long, boring soundchecks. This can also be very useful for hearing a very detailed and isolated

representation of how your EQ settings are working.

## 8.9 100-240VAC POWER INPUT

Felix is powered by a universal AC power supply. This means that no matter where your musical wanderings take you, you can plug Felix in to the wall and he will work. And it also means one less wall wart you'll own in your life. All units are shipped

# 9 Operation

## 9.1 WHERE TO PUT FELIX?

Great question. We recommend you put him wherever you want. He will look very pretty when you first pull him out of his box, but trust us, he is built to stand up to just about any kind of stage shenanigans you might encounter. All the pots have steel shafts and are well mounted to the top panel. All the 1/4" jacks have heavy duty metal bushings. The top panel is 1/4" extruded aluminum, and the bottom chassis is appropriately heavy duty. As you may have surmised by now, the main inspiration for this product was to have studio-grade audio hardware, properly ruggedized to live on the stage floor or mounted to a pedal board.

Also, we have included mounting holes on the underside for a standard mic stand mounting flange (which can be found at most larger music gear retailers). This allows Felix to be mounted directly to the top of a mic stand. If you do choose to keep Felix up of the floor, you can still access the BOOST/TOGGLE and MUTE/TUNE footswitch features by connecting an external footswitch to the 'fs' jack on the rearpanel.

Now that you have picked a place for Felix to reside, it's time to make some sound.

## 9.2 USING THE XLR MIC INPUT CH1

Before connecting a microphone to Felix, make sure the Ch1 gain knob is turned all the way down and the side panel 48V phantom power switch is set to off (pushed out). Then connect your microphone and if 48V is needed, simply activate it with the side panel 48V switch. Always remember to turn 48V power ON after connecting your microphone and OFF before disconnecting your microphone.

Gain range for this input is adjustable between +18dB and +60dB via the top panel Ch1 GAIN control knob. Use the top panel Ch1 signal / clip indicator to properly set the mic level. The LED will light green with signal present, then will begin to flash red when the channel is 12dB before clipping. This means that occasional red flashes are ok, but if the LED is mostly red, well then, you better turn it down.

Because we designed Felix to play well with a wide array of mics and pickups on a wide array of instruments, the gain control sweep required is more than this single potentiometer can provide. Accordingly, there is an internal jumper which activates an 18dB pad on the line input for this input. The Ch1 microphone XLR mic input is not affected by this pad. This pad jumper is set to 'ON' from the factory, which effectively matches the gains of Ch1 and Ch2. If you are using a microphone in

with a standard AC cable suitable for the country where it is going. This is a standard, off-the-shelf IEC power cable, so in the event you misplace the one that came with your Felix, you can just borrow one from the soundperson or the bass player and go.

a scenario that requires more microphone gain (e.g. a low output pickup on a delicate acoustic instrument), you may need to open up Felix and set this jumper in the 'ON' position. Or likewise, if the mic or pickup you are using is overloading this channel, you will probably need to set the pad back to its 'OFF' position. This is easy to do! We specifically designed Felix's chassis to make it easy to access internal jumpers. Please refer to the jumper diagram and access procedure on p. 12&13. See, aren't you glad you're reading this manual? Us too.

**WARNING: make sure to disconnect the power mains before removing the Felix top panel to make jumper adjustments.**

## 9.3 INSTRUMENT / LINE INPUTS

These are the inputs you will use for connecting your instrument(s) to Felix. There is a wide array of different pickup types in the world: active electronics in an electric bass, passive under bridge plate transducers, contact mics, soundhole magnetics, etc.. We wanted to make sure Felix brought out the best in all of them and accordingly, there are some useful features that can help make that happen.

### Using a Dual Source Instrument with a Single TRS Cable

The Ch2 input can accommodate two different signals from a dual source pickup system on a single TRS 1/4" cable. The connector is a standard TRS 1/4" jack and is wired:

- Tip signal to Ch2 input,
- Ring signal normaled to Ch1 input,
- Sleeve to ground.

This feature makes using a dual source pickup system very convenient. Assuming your instrument is properly wired with a TRS output jack, you can simply use a standard TRS cable to connect both sources to Felix, then EQ and blend each signal accordingly. The sonic results of this kind of acoustic pickup system can be very excellent

### Input Impedance Selection

Both instrument inputs have 3 different impedance settings:

Ch1: med - 1M $\Omega$  / hi -10M $\Omega$  / low - 10k $\Omega$   
Ch2: med - 1M $\Omega$  / hi -10M $\Omega$  / low - 332k $\Omega$

In general, most passive pickups will want to connect to a higher impedance setting, while active pickups probably a lower. Passive pickups generally will have more sensitivity to input impedance, but there are no hard and fast rules. Check with the manufacturer of your particular pickup system to see if they recommend a specific input impedance for their device.

Ultimately, as is with so many things like this, the final judge of this setting should be your ears. Impedance mismatches at this stage may not even be audible, or very subtle, or totally apparent. But trust yourself here – nothing will break if you have the wrong setting – just audition the 3 positions of the impedance switch and if one sounds better over the other 2, than that's the correct setting. Yeehaa!

## 12V Power

Both Ch1 and Ch2 instrument inputs can be used to amplify an electret capacitor microphone. These are common for applications where small microphones are mounted inside acoustic instruments, or lavalier style microphones used somewhere on the outside of the instrument. Normally these microphones will contain very small integrated preamps which require a small voltage to power. So the Felix can send 12V phantom power out on both of these inputs. This is activated via DIP switch # 5 on the side panel.

12V power can be applied to the tip, ring or neither of each channel's input jack. Configuration is done via internal jumpers, described in detail on pages 12 & 13.

*NOTE: this power supply charges up slowly, so you may need to wait 5-20 seconds before signal from your electret mic is present at the input of Felix. And, as with 48V phantom power in the XLR mic input, it is always best to make your input connections before applying power at the DIP switch, and power OFF the 12V at the DIP switch before disconnecting your source.*

## Phase Reverse

Both Ch1 and Ch2 have phase reverse switches, located on the left side panel, directly next to the 48V phantom power switch. Use these to toggle the polarity of either channel. Experiment with these methodically – one at a time, to find the setting that sounds right. If you are blending two sources on one instrument, you may find that flipping the polarity on one source or the other sounds best. If you are using Felix to toggle between two different instruments, you probably won't need to mess with their polarity.

Phase relationships can be very complicated, and discrepancies can result in highly accentuated or de-accentuated bass response of a blended signal. Or it can sound hollowed out and thin, or just downright weird. Again, the rule of thumb here is whatever sounds right is probably right.

There may be setup scenarios where the front of house or monitor engineer requires you to try flipping the phase to achieve better phase coherency with another signal in the mix. At the very least, it's good for you to know how to operate these controls and hear them in use with your instruments.

## 9.4 FILTERING AND EQ

One of the truly defining features of our pal Felix is the very powerful, fully independent EQ / filter controls on each channel. Each channel has identical controls, so the descriptions in this section apply to both Ch1 and Ch2.

If you haven't used EQ's or filters much, we will provide a basic overview here. But the full science of this process is more than we can cover here, so we strongly recommend some adjunct

reading:


<http://en.wikipedia.org/wiki/Equalization>

As with all audio processing techniques, the more you know, the better you will sound.

## HPF / Notch

This is the next control to the right of the GAIN knob for each channel. To select between HPF and Notch, adjust the left side DIP switch locations # 1 & 2 respectively for channels 1 & 2.


HPF: A High Pass Filter will only allow signal information above its set frequency to pass downstream to the output. This filter employs 12dB per octave roll off and uses a Tompson – Butterworth response for the best combination of passband flatness and time domain response. Yes, that will be on the quiz.

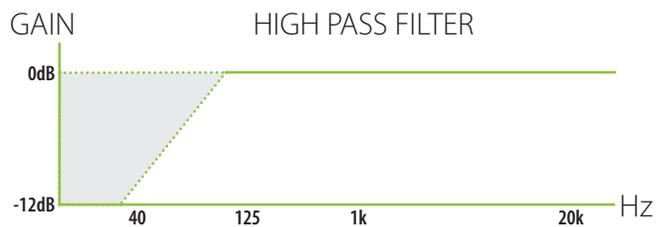

Simply put, use the high pass filter to cut unwanted bass frequencies out of a signal. Usually a HPF is used to eliminate rumble or non-musical low frequency information out of a signal. But this HPF range is from 20Hz to 1.0kHz, so you can make very dramatic filter settings. Some instruments won't have any information below a certain frequency. Fiddle for example only extends its lowest fundamental down to 200Hz. So if you are amplifying a fiddle, you could safely set the HPF at 150 – 200 Hz without hearing much effect in the tonality of the instrument. Whereas a bass can have a low fundamental down around 30Hz, so setting the HPF any higher than that could affect its tonality.

If you are on a stage with an acoustic guitar, and there is lots of low end flying around making you sound bad, or feeding back or both, the HPF might be your first stop to try to control those problems.


Notch: A notch filter is a very sharp and deep cut of a specific frequency. This is used predominantly to find and remove a specific problem frequency that may be feeding back through stage monitors or amps, or to simply cut out a very specific, narrow unwanted part of an instrument's frequency range. This notch uses the same frequency sweep of 20Hz – 1.0kHz.

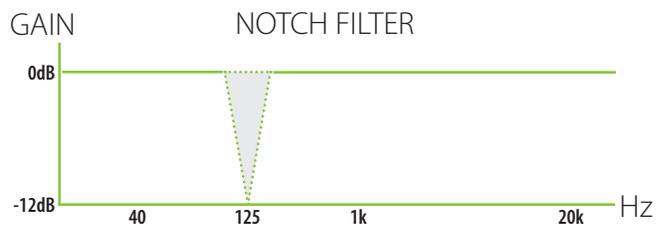

Under normal operation, if you don't have a use for a notch filter, we recommend you leave the left side panel DIP switch in the HPF setting. That way, with the HPF set in its fully counter clockwise position, this entire filter control is effectively out of the signal.

## Low

The Low control of the Felix preamplifier is fixed at 125Hz (+/-3dB) corner frequency / 40Hz peak, with a gain range of -12 to +12dB. This is a fixed shelving type control, which means everything below the 125Hz is boosted or cut. Use this control for cutting and boosting bass frequencies. It's all about the bass.

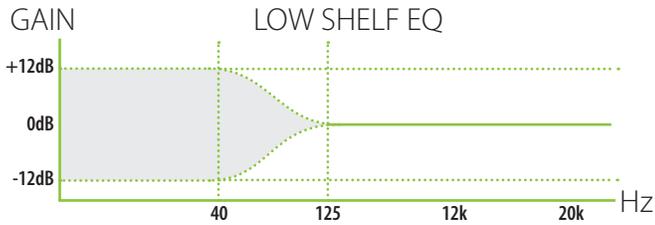

Also, because certain acoustic instruments (banjo) may react better to a higher corner / peak frequency, we have added a Low control range jumper on the main PCB. Moving this jumper shifts the Low frequency up to 250Hz (+/-3dB) corner frequency / 80Hz peak. *This is easy to do!* We specifically designed Felix's chassis to make it easy to access internal jumpers. Please refer to the jumper diagram and access procedure on pages 12 and 13. Bravo to you for reading this manual. You get an A.

**WARNING** Make sure to disconnect the power mains before opening removing the Felix top panel to make jumper adjustments.

## Mid

The mid range section of Felix's equalizer is fully parametric, which enables you control the mid range gain, frequency and Q independently. The range of these controls are:


**Gain** = +/- 12dB,

**Freq range LO setting** = 70Hz – 880Hz

**Freq range HI setting** = 670Hz – 8.0kHz

**Q** = .5 – 5


The frequency range can be switched between the LO and HI settings via the left side panel DIP switch locations # 3 & 4. With these two available ranges, the over all range of the mid controls is very wide, which enables targeting of specific sonic areas of a multitude of instrument or pickup types.

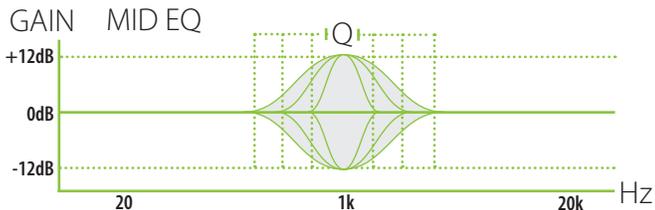

Q factor determines the sharpness of the bandwidth of the frequency being adjusted. A higher Q factor setting – turning the Q knob further clockwise - creates a sharper bandwidth and thus a more targeted, surgical EQ adjustment. Alternately, a lower Q factor - turning the Q knob further counter clockwise - creates a broader tonal adjustment.

## High

The High control of the Felix preamplifier is set with a 2kHz (+/-3dB) corner frequency/ 12kHz peak, with a gain range of -12 to +12dB. This is a fixed shelving type control, which means everything above the 2kHz is boosted or cut. Simply put, this is a treble control. If you think your banjo may be too bright, turn this knob counterclockwise. If you think your guitar needs a little more bite, turn this knob clockwise. If you're not sure, then get down there and start turning it one way or the other until it sounds better.

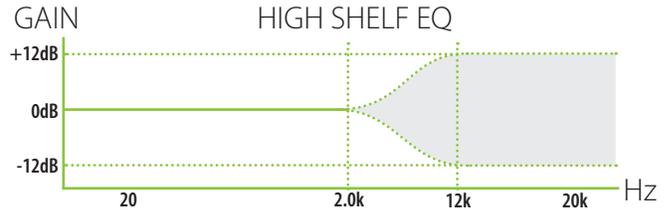

## 9.5 OUTPUT CONTROLS

### Boost

Want Felix to go to eleven? How about twenty? This knob sets the amount your signal is boosted when you activate the 'BOOST' footswitch. Fully counter-clockwise is zero boost added, fully clockwise adds +10dB of boost. The boost is global, so it is added to every signal output leaving Felix – blended or individual channels, amp out or either ISO out, even the headphone out.

As you can probably imagine, if you are using a microphone or a particularly feedback prone pickup system, adding boost might easily send you in to feedback territory. So start small. If you need to boost your output, start with a gentle boost amount and work your way upwards. If you start to hear stage feedback or are overloading the input at the console, then you'll need to back it off. Felix is not responsible for disgruntled soundpeople you may encounter during the operation of the boost circuit. He wants to keep those people happy, and you should too.

### Amp / Phones Output Level

This knob sets the output level of the unbalanced Amp and tuner outputs on the rearpanel and also of the headphone jack on the right sidepanel. If you are using a stage amp, use this control as your master level. Correct input gain settings for your sources, with the signal LED showing mostly green, should not be adjusted to alter your stage amp level. Rather, use this control to make master level changes.

If your are using the side panel headphone jack with the MUTE switch activated, remember that headphone level adjustments will also affect stage amp level, which could lead to a big nasty sound on stage when un-muting Felix outputs. Simply make a note of your stage amp level before making adjustments to this control while headphone monitoring.

### Mix

This control adjusts the mix, or blend, between Ch1 and Ch2. Before using this control, its important to verify if Felix is Blend or A/B mode. This setting is toggled via the side panel

DIP switch #6. With the switch in MIX mode (the downward position) this control will operate normally as a simple mixer. This knob turned fully counter-clockwise the outputs (set to mix) will be sending 100% Ch1, with the knob full clockwise those outputs will be sending 100% Ch2. With the knob centered at 12 o'clock, the blend outputs will be sending a 50/50 blend of Ch1 and Ch2.

***Remember, if you intend to blend Ch1 and Ch2, you must set the DI output(s) or Amp output blend mode via the pushbutton toggle switches on the rearpanel.***

If Felix is set to A/B mode via the left side panel DIP switch #6, then this control will have no effect.

## 9.6 FOOTSWITCH CONTROLS

### **Blend – A/B**

This is the far left foot switch on Mr. Felix. If the unit is set blend mode via DIP switch # 6, then this switch will do nothing, and both adjacent LEDs will be permanently illuminated. If the unit is set to A/B mode, then this switch will be used to toggle between Ch1 and Ch2, with the accompanying amber LEDs lighting and extinguishing accordingly. This toggle mode is exclusive, so if you have Ch1 selected, Ch2 will be muted and vice versa.

### **Boost**

You guessed it. This switch activates the Boost circuit, at the level you set with the upper row 'boost' knob. This circuit is global, so the boosted signal will be coming out of every output. For those about to rock, kindly activate this switch first. The LED will light up GREEN for go..

### **Mute / Tune**

This switch mutes all Felix outputs (ISO 1, ISO 2 and AMP) except the tuner and headphone outputs. This enables you to quickly and easily cut your signal to tune or unplug your instrument without having to have the soundperson mute your channel.

When MUTE / tune is active, the adjacent LED illuminates RED.

## 9.7 SIDE PANEL CONTROLS

Felix has a lot going on, more than we could fit on the rear and top panels alone. So there are a number of features to be familiar with on the side panel.

### **Ch1&2 Phase Reverse**

These two pushbutton toggle switches reverse the polarity of each channel's audio signal. To reverse the polarity of either channel, simply push the toggle in, to return to no polarity reverse, push the toggle again to return it to its outer position.

### **48V Phantom Power**

This activates 48V phantom power for the Ch1 microphone preamplifier. Phantom power is sent out on pins 2 and 3 of the XLR connector.

### **DIP Switches**

This is a bank of 6 DIP switches, used to activate various modes or settings. Switches 1 & 2 select between Ch1 & Ch2's HPF or notch setting. Switches 3 & 4 select between Ch1 & Ch2's mid EQ's frequency range, LO or HI. Switch 5 activates 12V power on the instrument inputs. Switch 6 selects between blend or A/B mode.


DIP switches are hard to adjust, which is good because they probably won't get inadvertently changed, but bad when you actually want to change them. Use the edge of a fingernail, a guitar pick or a toothpick. Whatever you chose, take care not to dig into the plastic too hard. You'll get the hang of it.

### **Headphone Jack**


This is a standard 1/8" mini headphone jack, suitable for most types of headphones. It is left / right mono, and follows whatever signal is present at the AMP output. The level control for this is the Amp / phones knob on the right side of the top panel. This output is always active, even if the top panel MUTE / tune switch is activated. This way you can play or practice privately with your headphones on while your stage outputs remain muted. Bandmates will be relieved, soundpeople will be happy. Kumbaya, etc...

# 10 Diagrams

## 10.1 INSERT CABLE WIRING

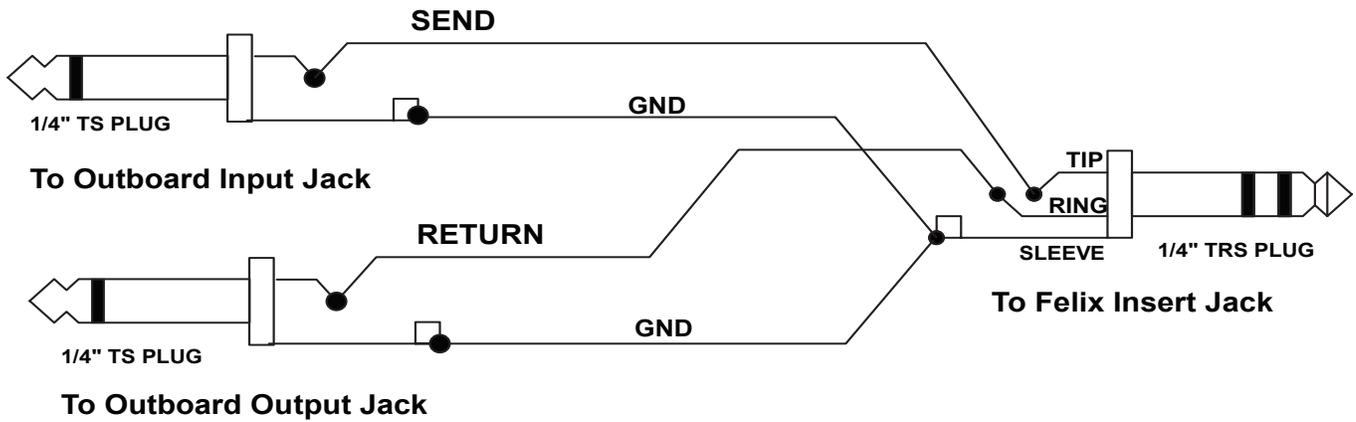

## 10.2 EXTERNAL FOOTSWITCH WIRING

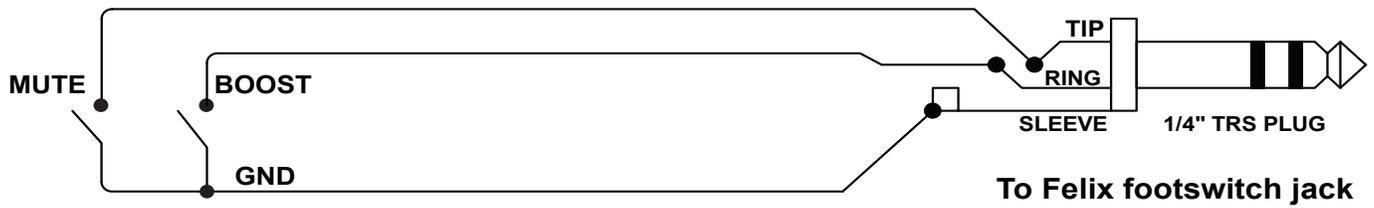

## 10.3 ADJUSTING INTERNAL JUMPERS

Several Felix settings can be adjusted via internal jumpers. While it's not trivial to do, if you are handy with a screwdriver and tweezers, you'll be fine. *This is not something you should attempt to do on a dark stage or in the back of the tour van.* Directions for disassembling the chassis and accessing the jumpers is as follows:

1.  **IMPORTANT:** Before you do anything, disconnect Felix from the AC power, and disconnect instrument and mic cables and place Felix on a flat stable surface with good lighting.
2. **DOUBLE CHECK:** Did you completely disconnect the power supply? Ok then.
3. With a #2 phillips screwdriver, remove the 4 chassis screws, located on the outer edges of the front bottom and rear bottom of the aluminum top chassis.
4. Orient the unit so the rearpanel is facing forward. Carefully pull up on the top chassis and flip it up and over the bottom chassis. This will reveal the top and bottom circuit boards. Do not pull them apart any further than the ribbon cables that connect them will allow. The top should rest easily on the work surface flipped over and behind the bottom chassis. See figure 2.
5. Now refer to the jumper location diagram on the following page to move any jumpers you wish.
6. To move a jumper, use tweezers or your fingernails to gently pull the jumper off of it's header pins. To reposition the jumper, double check the diagram, then gently press the jumper back down in the correct location.
7. J2, J17, J18 all reside on 2-pin headers. If you wish to set these to a non-jumpered setting, simply push one side of the jumper down onto one pin, so that the two pins are not connected.



**Fig.1 removing the chassis screws**


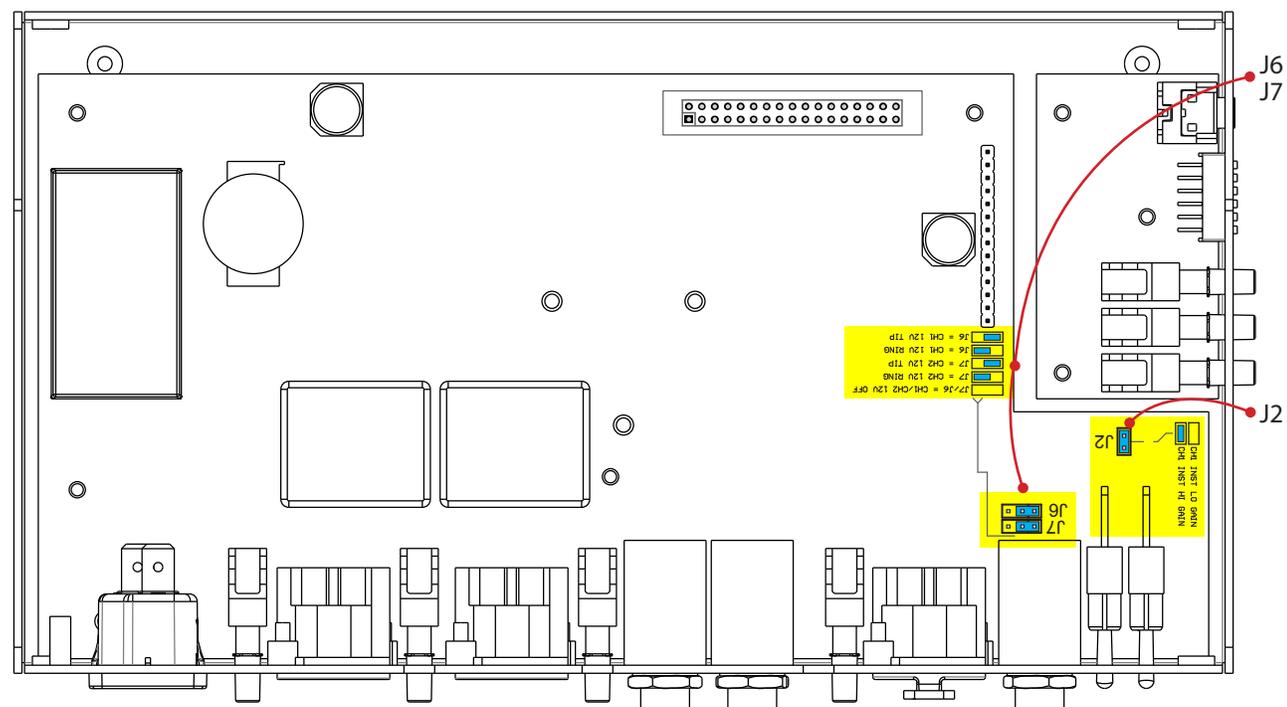


**Fig. 2 opening the chassis**

8. When you are finished adjusting the jumpers, make sure there are no loose jumpers or any other junk lying around inside your Felix.
9. Then carefully reassemble the top and bottom chassis, making sure to let the ribbon cable fold easily back in place. If there is any tension or something isn't fitting properly, carefully pull the top and bottom back apart and inspect for interference.
10. Once you have put the unit back together, replace the 4 screws, making sure they go in straight and true. You may need to nudge the top panel back and forth a bit to ensure the holes in the top panel chassis line up evenly with the inner threaded holes.
11. Do not tighten the screws until all 4 are cleanly started in the threads. Take your time and remember, cross-threading is a crime.

If you get stuck or something doesn't look right, call us right away and we'll get you taken care of.

## 10.4 INTERNAL JUMPER LOCATIONS

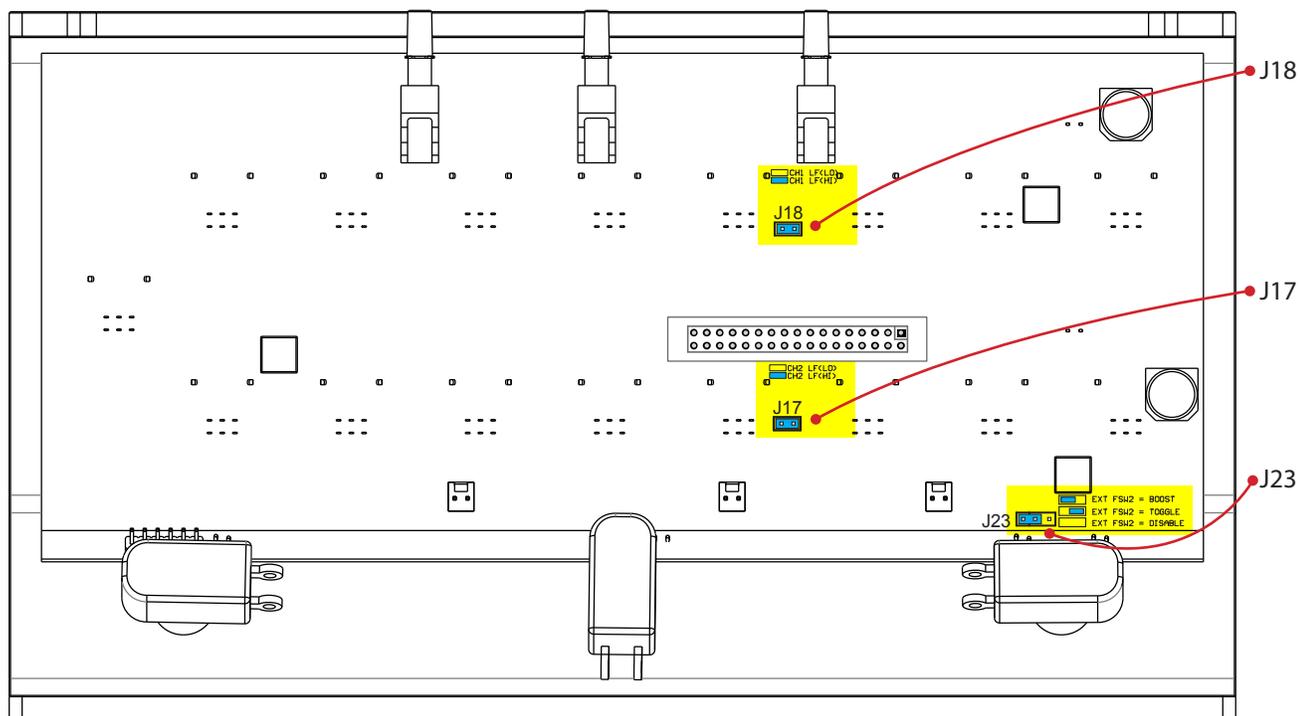

J18 - Sets the Ch1 EQ LOW corner frequency. LO position is 125Hz, HI position is 250Hz.


J17 - Sets the Ch2 EQ LOW corner frequency. LO position is 125Hz, HI position is 250Hz.

J23 - Sets the secondary external footswitch function. Options are boost, toggle or disable. Primary footswitch function is fixed as MUTE / TUNE.

J6 and J7- Configures 12V power, which can be applied to either channel's tip, ring, or set to off. Set these according to how your microphone / instrument is wired.


J2 - Sets the Ch1 instrument input gain range. Options are LO (3-44dB) and HI (21-62dB).

# 10.5 BLOCK DIAGRAM

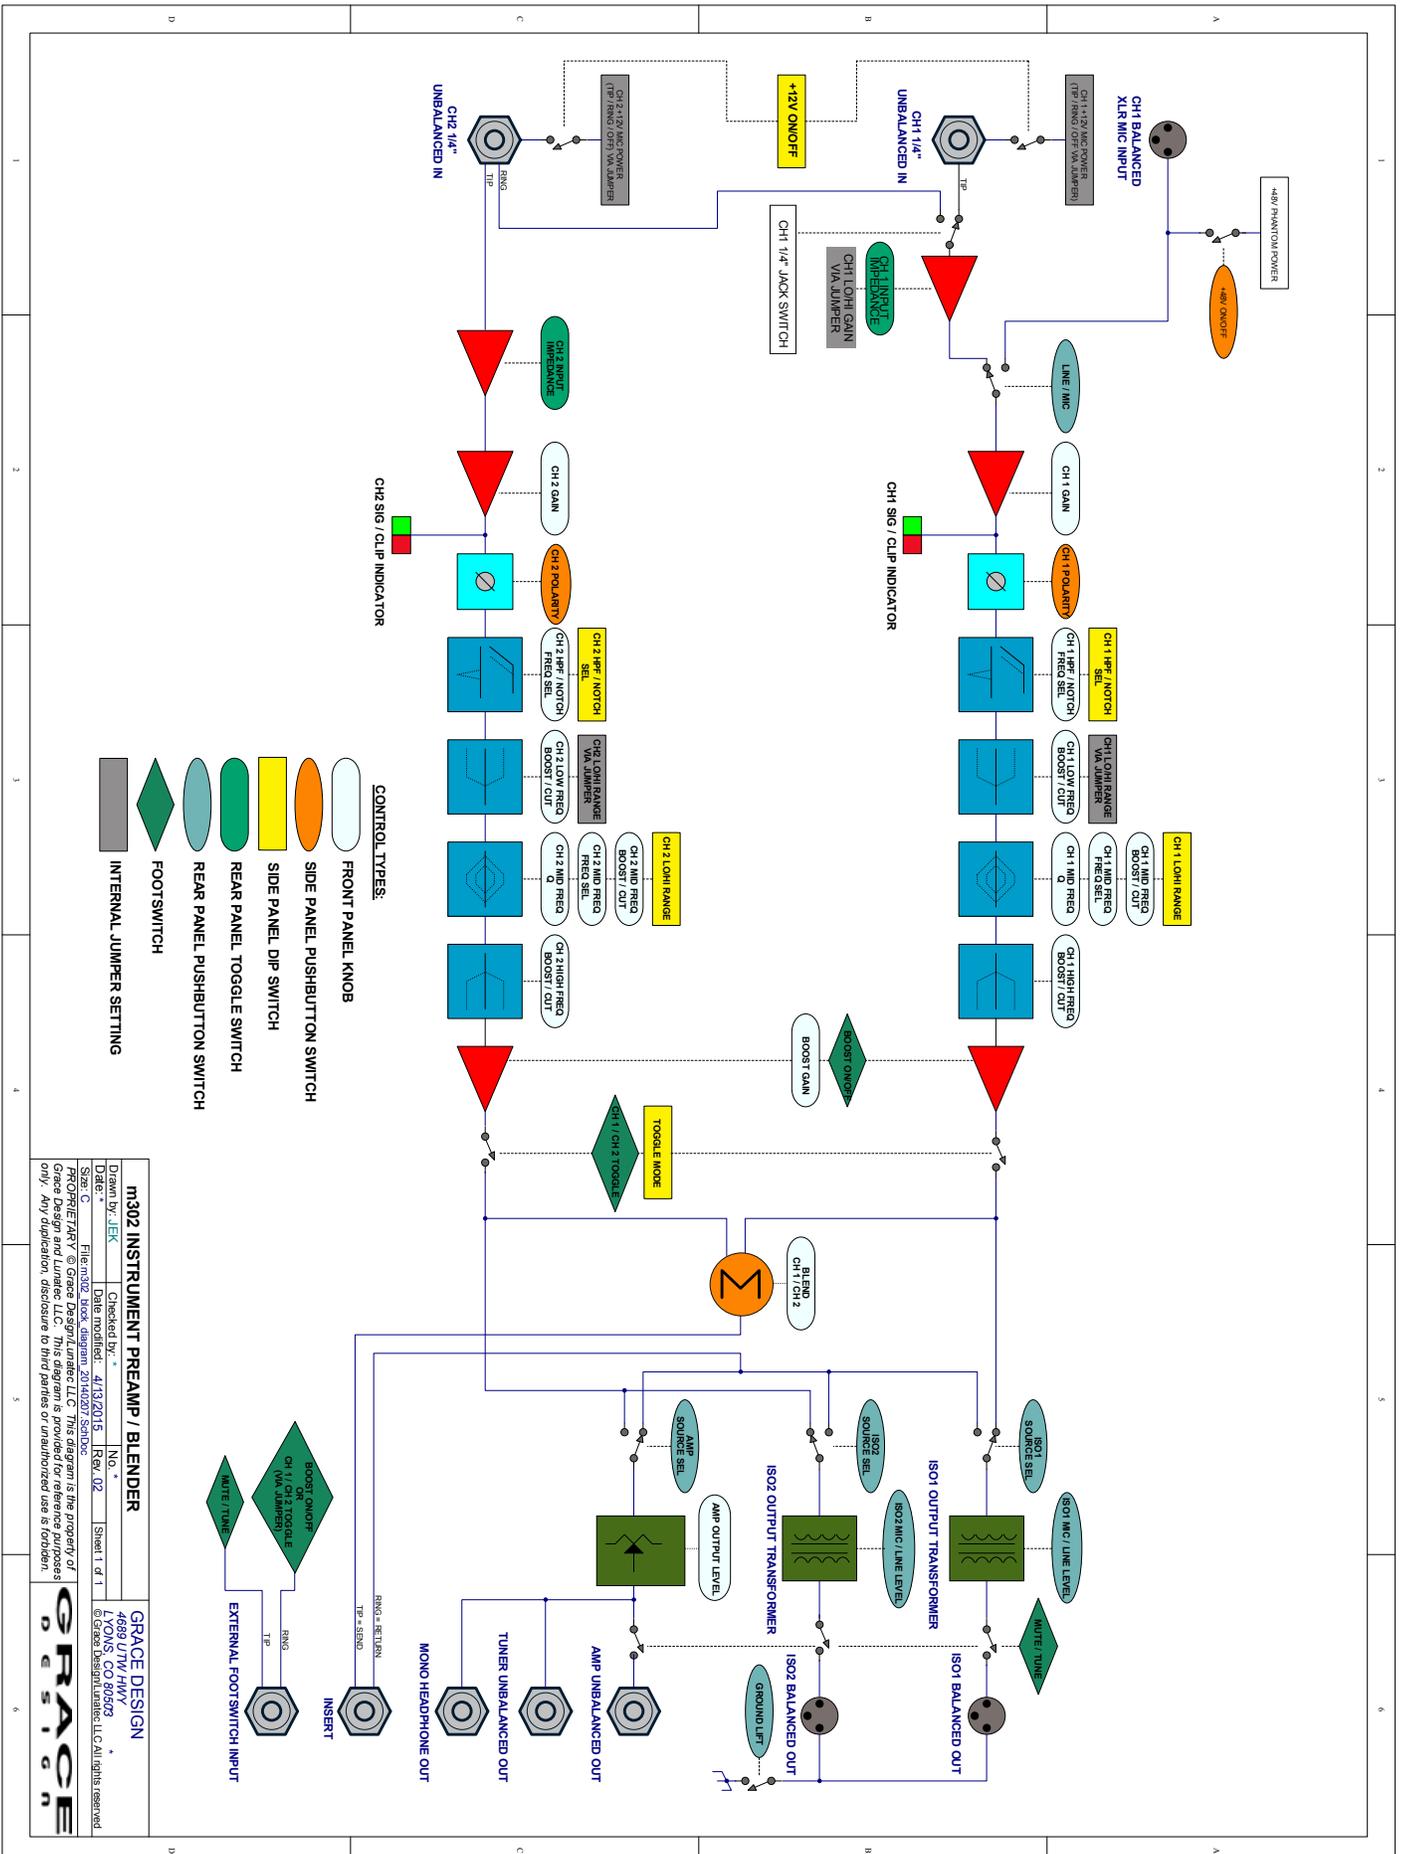

# FELIX connections

Nothing too terribly hard and fast here - just the basics about how to plug stuff in and out of your preamp. There are many ways to connect a huge array of instrument sources to FELIX. If you aren't sure about how something works, please have another look at your owner's manual, check out our website - [www.gracedesign.com](http://www.gracedesign.com) - or feel free to call us. We are always glad to help out in any way we can. 1.303.823.8100, M-F, 9-5 MST

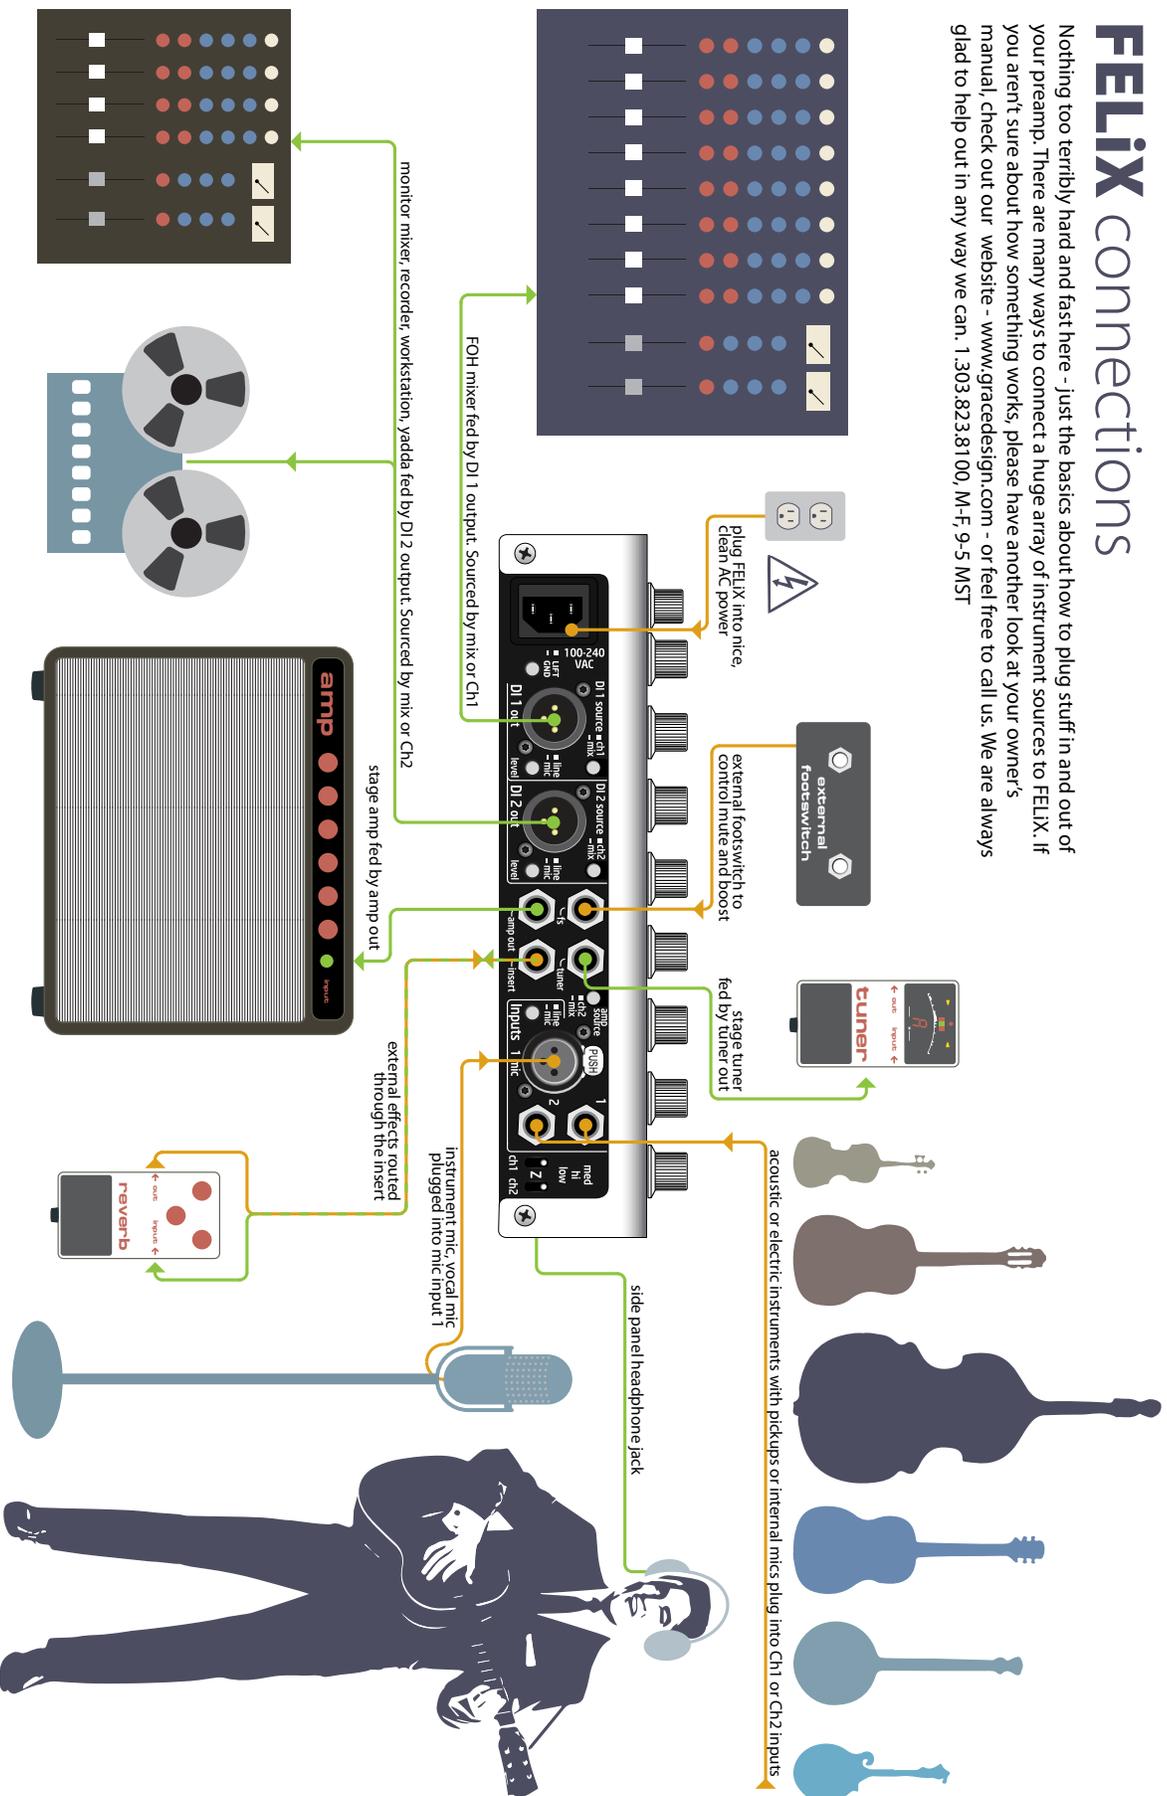

# 11 Specifications

<b>GAIN RANGE (Input to DI Output)</b>		
CH1 MIC		21-62dB
CH1 Inst	Low Gain: 3-44dB / High Gain /	21-62dB
CH2 Inst		-1.5-36.5dB
Boost		0-9dB
<b>THD+N 1kHz, 22Hz-22kHz BW (MIC Input to DI Output)</b>		
@ 20dB Gain +10dBu out		<0.0045%
@ 40dB Gain +10dBu out		<0.0050%
@ 60dB Gain +10dBu out		<0.010%
<b>INTERMODULATION DISTORTION - SMPTE/DIN 4:1 7kHz/50Hz (MIC Input to DI Output)</b>		
@ 40dB Gain +10dBu out		<0.05%
<b>NOISE - REFERRED TO INPUT CH1 MIC @60dB Gain 22Hz-22kHz BW</b>		
50Ω source		<-128dB
<b>CMRR @60dB Gain</b>		
100Hz		>55dB
1kHz		>75dB
10kHz		>75dB
<b>FREQUENCY RESPONSE (Input to DI Output)</b>		
Mic input @ 40dB Gain -3dB		20Hz – 65kHz
Inst input @ 20dB Gain -3dB		20Hz – 65kHz
<b>I/O IMPEDANCE</b>		
CH1 MIC Input		8.1kΩ
CH1 Inst Input	HI: 10MegΩ / MED: 1MegΩ / LOW: 10kΩ	
CH2 Inst Input	HI: 20MegΩ / MED: 1MegΩ / LOW: 332kΩ	
Insert Input		10kΩ
DI Outputs		150Ω
Amp, Tuner, Headphone and Insert Outputs		150Ω
<b>SIGNAL / PEAK LED METER</b>		
Green threshold		-10dBu
Red threshold		+10dBu
<b>MAXIMUM INPUT LEVEL</b>		
CH1 MIC		0dBu
CH1 Inst	Low Gain: +21dBu / High Gain:	0dBu
CH2 Inst		+20.5dBu
<b>MAXIMUM OUTPUT LEVEL - 100k Ohm load, 0.1% THD</b>		
DI Outputs	Line: +20dBu / Mic:	-6dBu
Amp, Tuner, Headphone and Insert Outputs		+22dBu
<b>High Pass Filter / Notch Filter</b>		
High Pass Filter		20Hz – 1kHz @ -12dB/octave
Notch Filter		20Hz – 1kHz, >-35dB, Q>1.0
<b>EQ</b>		
Gain		+/- 12dB
Low Frequency	Low Range: 125Hz Shelving / High Range: 250Hz Shelving	
Mid Frequency	Low Range: 70Hz – 880Hz / High Range: 670Hz – 8kHz	
Mid Frequency Q		0.5 – 5
High Frequency		2kHz Shelving
<b>OUTPUT NOISE 22Hz-22kHz BW @ MIN Gain</b>		
CH1 MIC Input (50 ohms) to DI Output		<-88dBu
CH1 Inst Input to DI Output		<-88dBu
CH2 Inst Input to DI Output		<-98dBu
<b>EXTERNAL FOOTSWITCH</b>		
MUTE (TIP)	Momentary – Normally Open – Switch to GND < 10Ω	
BOOST / TOGGLE (RING)	Momentary – Normally Open – Switch to GND < 10Ω	
<b>POWER CONSUMPTION</b>		
100-240VAC 50/60Hz		10 Watts Max
<b>WEIGHT and DIMENSIONS</b>		
3.2lbs		H3.0" x W9.5" x D5.5"

## 12 Cleaning and Maintenance

---

Your Felix is chassis is constructed out of high quality aluminum and steel. Under normal circumstances, very little maintenance is required to keep it looking good. However, if you find it getting more dirty or dusty than you like, here are some cleaning tips: We recommend using a little shot of Windex™, applied to a clean, dry, lint free cloth. Gently wipe all surfaces, taking care not to allow the cleaning product to build up around or under the knobs.

## 13 Warranty

---

- Grace Design warrants this product to be free of defective parts and workmanship for a period of five years. This warranty period begins at the original date of purchase and is transferable to any person who may subsequently purchase the product during this time.
- This warranty excludes the following conditions: normal wear and tear, misuse, customer negligence, accidental damage, unauthorized repair or modification, cosmetic damage and damage incurred during shipment.
- During the time of this warranty, Grace Design will repair or replace, at its option, any defective parts or repair defective workmanship without charge, provided the customer has appropriate proof of purchase and that the product has its original factory serial number.
- In order for Grace Design to provide efficient and timely warranty service, it is important that you mail the completed warranty registration card enclosed with all of our products within 10 days of the original date of purchase. You may also register your product directly with Grace Design by telephone (303-823-8100 Monday-Friday 9:00am to 5:00pm MST), or you can register your product online at [www.gracedesign.com](http://www.gracedesign.com).
- This warranty is in lieu of all other warranties whether written, expressed, or implied, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.
- In no event will Grace Design be liable for lost profits or any other incidental, consequential or Exemplary damages, even if Grace Design is aware of the possibility of such damages. In no event will Grace Design's liability exceed the purchase price of the product.
- This warranty gives the customer specific legal rights. The customer may also have other rights, which vary from state to state. Some states do not allow limitations on implied warranties or consequential damages, so some of the limitations of the above may not apply to a particular customer.

# 14 Manual Revisions

---

Revision	Page	Change	Date	Initials
A	all	Initial release	05/08/2015	edg